



dreamGEAR
www.dreamgear.net

Package Contents:

- 1 - Wireless Sensor
- 1 - Goose Neck Suction Cup Mount

WIRELESS SENSOR SET UP:

1. Open the battery door and insert 4 AAA batteries.
2. Power ON the Wireless Sensor.
3. When powered ON, the red LED next to the power button will illuminate.

USING WIRELESS SENSOR WITH SUCTION CUP MOUNT:

1. To unlock the Suction Cup Mount, gently slide the two locking tabs out and pull upward.
2. Find a smooth, flat surface to place the Wireless Sensor.
3. With the Suction Cup Mount tabs in the up position, press firmly down on the suction base until secure.
4. Push the lock down until it clicks 2 to 5 times, depending on desired suction level.



5. Angle the neck of the Goose Neck Suction Cup Mount until the Wireless Sensor is directly facing the playing area.
6. Enter the "Wii Settings" menu. Under "Sensor Bar" select "Position" and confirm that the current setting matches the position of the Wireless Sensor. If necessary, change the "Position" setting.

USING WIRELESS SENSOR WITHOUT SUCTION CUP MOUNT:

1. Carefully remove Wireless Sensor from the Goose Neck Suction Cup Mount.
2. Place the Wireless Sensor on a stable surface centered with the television, making sure that the front of the device is facing the playing area with no obstructions.
6. Enter the "Wii Settings" menu. Under "Sensor Bar" select "Position" and confirm that the current setting matches the position of the Wireless Sensor. If necessary, change the "Position" setting.

SAFETY NOTICE:

- To avoid injury or damage, make sure other people, animals, or objects are not within your range of motion.

dreamGEAR
www.dreamgear.net

FOR TECHNICAL SUPPORT
PLEASE CONTACT: 1-877-999-DREAM
or support@dreamgear.net